


50/50 CORE MIX

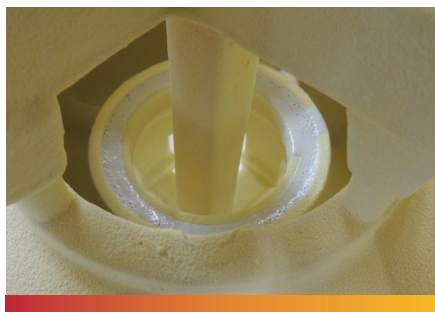

Ideal for Hand Packing Cores

It is exothermic (giving off heat) as it sets; which, in most cases, prevents it from being used in direct contact with wax patterns. However, if the core is small, such as with a golf club hosel, you can form the core against the wax pattern without damage to the wax.

50/50 Core Mix can be used for making preformed cores, depending on the size and type of core needed. 50/50 Core Mix is used primarily by ferrous casters.

Application Recommendations

Water/Powder Ratio by Weight*	16-18/100
Working Time**	5-6 minutes
Setting Time	6½-10 minutes

*To improve the strength of 50/50 Core Mix, replace a portion of the water with Core Hardener 2000™ binder. Flow characteristics are reduced when using higher percentages of Core Hardener 2000 binder. It is recommended to use 2 parts water to 1 part Core Hardener 2000 binder by volume.

**By using cold water or a combination of cold water plus chilled core material you can lengthen the working time.

1. Powder should be added to water in the proper proportions and mixed by hand or mechanically to make a smooth consistency. This should take 1-1½ minutes. The mix can then be poured or vibrated into the ceramic shell, rubber or plastic mold.
2. 50/50 Core Mix will bond to most metallic objects unless their surfaces are heavily lubricated. 50/50 Core Mix can be vacuumed after mixing to remove excess air. This process will help increase core strength.
3. After the preformed core molds are poured, they should be allowed to set until they have sufficient strength to permit separation. This time is best determined by experimentation and will vary depending on the size and type of the mold. Adding external heat will accelerate the hardening process.
4. Preformed cores should be air dried 3-4 hours, then baked at a minimum of 1200° F (650° C) for 3-4 hours before use. If a metal mold reaction occurs, the baking temperature should be increased until the reaction is eliminated. In some cases it may be necessary to bake the cores in a kiln at 2300-2500° F (1260-1271° C). In such cases, the cores should be supported so they don't sag or distort.
5. For cores hand packed into a ceramic shell mold, follow the same mixing instructions. After the core has been packed, allow 1 hour for the core material to set before proceeding with the remaining shell coating. Ceramic shells containing these core materials should be processed as normal. After autoclaving, dry for 4 hours. This allows the excess water to evaporate prior to firing, preventing the core from exploding.
6. Where autoclave dewaxing is used to remove the pattern, the pressure must be released very slowly to prevent destruction of the core material.
7. When making preformed cores or coring directly into the wax, a core extension is needed. The shell is built around the core extension to hold the core in place. The core extension should be at least ¼" long or longer, depending on the core size. When hand packing cores, a core extension may be necessary depending on the core size and configuration. If making a core extension is not possible, a fused quartz tube can be inserted into the core material before it sets.

Storage & Handling

Shelf life is 1 year from date (MMDDYY) in batch lot number on label. Rotate stock to maximize shelf life.



RANSOM & RANDOLPH

3535 Briarfield Boulevard | Maumee, OH 43537 USA
800.800.7496 | 419.865.9497 | 419.865.9997 (FAX)
www.ransom-randolph.com

    Made in the USA

Ransom & Randolph GmbH
Leipziger Straße 40 | 04571 Rötha Germany
+49 342 06373999

Investing with Innovation™

50/50 CORE MIX

Safety

North America: Danger. Contains crystalline silica. May cause cancer. Causes damage to lungs through prolonged or repeated exposure by inhalation. See SDS for more information

EU: Danger. Contains respirable crystalline silica. May cause damage to lungs through prolonged or repeated exposure. See SDS for more information.

As the conditions or methods of use are beyond our control, we do not assume any responsibility and expressly disclaim any liability for any use of this product. Information contained herein is believed to be true and accurate but all statements or suggestions are made without warranty, expressed or implied, regarding accuracy of the information, the hazards connected with the use of the material or the results to be obtained from the use thereof. Compliance with all applicable federal, state, and local regulations remains the responsibility of the user. All potential liability related to the sale and use of this product is limited to the cost of the particular goods sold in their respective transactions.



RANSOM & RANDOLPH

3535 Briarfield Boulevard | Maumee, OH 43537 USA
800.800.7496 | 419.865.9497 | 419.865.9997 (FAX)
www.ransom-randolph.com



Made in the USA

Issue Date: March 21, 2024

Ransom & Randolph GmbH
Leipziger Straße 40 | 04571 Rötha Germany
+49 342 06373999

Investing with Innovation™